



Feature operation

Call Forward

| | | | |
|------------|-----|--|--|
| Activate | Fwd | | |
| Deactivate | | | |
| Reinstate | Fwd | | |

Call PickUp

| | | |
|--|--|--------|
| | | Pickup |
|--|--|--------|

Conference

| | | | |
|--|------|--|--|
| | Conf | | |
|--|------|--|--|

Hold

| | | | |
|-----------------------|--|--|--|
| Place a call on hold | | | |
| Return to a held call | | | |
| Last Number Redial | | | |

Message

| | | | |
|--|--|--|--|
| | | | |
|--|--|--|--|

Ring Again

| | | |
|---------------|--------|--------|
| Activate | RngAgn | |
| When notified | | |
| Deactivate | | RngAgn |

Transfer

| | | | |
|--|-------|--|--|
| | Trans | | |
|--|-------|--|--|

Adjust volume

| | | | | |
|--|------------|----|--|------------|
| | (Volume +) | or | | (Volume -) |
|--|------------|----|--|------------|

Legend

| Icon | Action |
|------|---|
| () | Indicates the key cap text label. For example, (Message). |
| | Lift the handset. |
| | Replace the handset. |
| | Press the goodbye key. |
| | Dial a number. |

Legend (continued)

| Icon | Action |
|------|--|
| | Press the line key. |
| | An icon flashes when a feature is being programmed. An icon lights steadily when a feature is active. |
| | Press the Services key once for server-based features, or press the Services key twice for local phone features. |
| | Press the Message/Inbox key. |
| | Press the Up/Down Navigation keys |
| | Press the Enter key |
| | Press the Expand key |

Services and Telephone Options menus

Services menu

| | | |
|--|--|--|
| | | |
|--|--|--|

Note: The **Services** menu contains the **Telephone Options**, **Password**, **Admin**, **Virtual Office**, and **MG 1000B** menus. These options are not available on all Nortel IP Phone 1110 phones. Consult your system administrator.

Telephone Options menu

The following are the most commonly used options:

Volume adjustment

| |
|------------------|
| Choose one of: |
| . Ringer |
| . Handset Listen |
| . Listen-only |
| speaker |
| . Buzzer |

Contrast adjustment

| | |
|--|--|
| | |
|--|--|

Language

| | |
|--|--|
| | |
|--|--|

Note: This language setting controls the language used by features on your phone only. To set the language used elsewhere on your phone, press **Services** twice, select 1. Preferences, and select 2. Language.

Date/Time format

| | |
|--|--|
| | |
|--|--|

Local DialPad Tone

| | |
|--|--|
| | |
|--|--|

Ring type

| | | |
|--|------|--|
| | Play | |
|--|------|--|

Call Timer

| | | |
|----|-----|--|
| On | Off | |
|----|-----|--|

Nortel IP Phone 1110



*Note: If supported by your server, the Feature Status Lamp provides a user-defined alert. Contact your system administrator to find out if this feature is available for you.

NORTEL

IP Phone 1110

For Nortel Communication Server 1000

Quick Reference Card



To provide feedback or report a problem in this document, go to www.nortel.com/documentfeedback.

Date: March 2007

Document Release: Standard 01.01

Document Number: NN43110-100

Copyright © 2007, Nortel Networks.

All rights reserved.

* Nortel, the Nortel logo, and the Globemark are trademarks of Nortel Networks.